

Floor Mount Door Holder

CE ESS EMC tested MA



Model:YD-606

Basic Instruction

Dual Voltage Selectable (12VDC or 24VDC) Emergency Release Button/Test Button Wall Mounting Direction

Low Current Consumption Reliable Fail-Safe Mechanism **Durable and Silence Operation**

Specifications

• Size: 80Lx80Wx120H(mm)

• Voltage: 12/24VDC+10%(Adjustment)

• Current Draw: 12V/140mA 24V/70mA

• Optional: Manual door release button

• Surface Temp: ≤+20°C

• Operating Temp: $0\sim+55^{\circ}$ C(14-131F)

• Weight: 1.05kg

• Holding Force: 50kg(110Lbs)

• Suitable for: All Kinds of Single(Double) Smokeproof Doors


• Suitable Humidity: 0~95%


• Finishes for Shell: High Temperature Paint Environmental

Protection Zinc

• Finishes for Armature: Chromium

Dimension

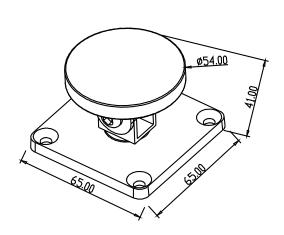

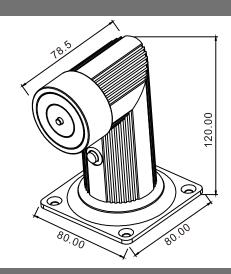

Installation

12/24V Adjustable

Remarks:

- 1. The default setting is 24VDC.
- 2. If user want to connect with 12VDC, operating as below:
- (1) Pull those two jumpers out. It is showed 4 pins here.
- (2) To set up 12VDC, insert one jumper on the position of 1 and 2, second jumper on the position of 3 and 4.

